

HESAI

www.hesaitech.com

JT32

32-Channel Mechanical Lidar User Manual

Classification: CO (Public)

Doc version: J11-en-260710

Table of Contents

■ About this manual	1
Access to this manual	1
Technical support	1
Legends and format	1
■ Safety notice	2
Special warnings	2
Operating environment	3
Personnel	5
Installation and operation	5
Repair	9
1 Introduction	10
1.1 Applicability	10
1.2 Operating principle	10
1.3 Basic structure	11
1.4 Channel distribution	12
1.5 Specifications	15
2 Setup	18
2.1 Mechanical installation	18
2.1.1 Exterior dimensions	18
2.1.2 Recommended installation	20
2.1.3 Notes on screw installation	21
2.2 Electrical interface	22
2.2.1 Pin description	23
2.2.2 Cables	26
2.3 Connection box (optional, with Ethernet port)	27

2.3.1 Ports	28
2.3.2 Connection	32
2.4 Network settings on the host computer (Ethernet communication)	34
2.4.1 In Windows	34
2.4.2 In Ubuntu	36
2.5 Tools	39
3 Data structure	40
3.1 Point Cloud and IMU Data Packets	41
3.1.1 Pre-Header	41
3.1.2 Header	42
3.1.3 Body (for Point Cloud Packets)	43
3.1.4 Body (for IMU Data Packets)	46
3.1.5 Tail	46
3.1.6 Point cloud data analysis method	47
4 Maintenance	49
5 Troubleshooting	51
Appendix A: Channel distribution data	53
Appendix B: Absolute time of point cloud data	55
B.1 Source of absolute time	55
B.1.1 GNSS as the clock source	55
B.2 Absolute time of the Point Cloud Data Packets	56
Appendix C: Legal notice	57

■ About this manual

Please make sure to read through this user manual before your first use and follow the instructions herein when you operate the product. Failure to comply with the instructions may result in product damage, property loss, personal injuries, and/or a breach of warranty.

Access to this manual

To obtain the latest version, please do one of the following:

- Contact your sales representative of Hesai.
- Contact Hesai technical support at service@hesaitech.com.

Technical support

If your question is not addressed in this user manual, please contact us at:

- service@hesaitech.com
- <https://www.hesaitech.com/technical-support/>
- <https://github.com/HesaiTechnology>

Legends and format



Warnings: Instructions that must be followed to ensure safe and proper use of the product.



Notes: Additional information that may be helpful.

Names of data fields are in monospace font.


For example: **Distance** represents the Distance field.

■ Safety notice

- Please make sure to read through this safety notice and follow all the instructions and warnings. Failure to comply with the instructions and warnings may result in product damage, property loss, and/or personal injuries.
- Please check the certification information on the product's nameplate. If an agreement has been made not to present certification information on the nameplate, please follow the agreed-to arrangements.
- If you incorporate this lidar product into your product(s), you are required to provide this user manual (or access to this user manual) to the intended users of your product(s).
- This lidar product is intended as a component of an end product. The end-product supplier is responsible for assessing the risk of use in accordance with applicable standards and informing the intended user of safety-related information.
- Should there be other agreements with specific users, the other agreements shall apply.
- Before using a product, please confirm with Hesai the development maturity of the product in a timely manner. For products still in development, Hesai makes no warranty of non-infringement nor assumes any responsibility for quality assurance.

Special warnings

Laser safety

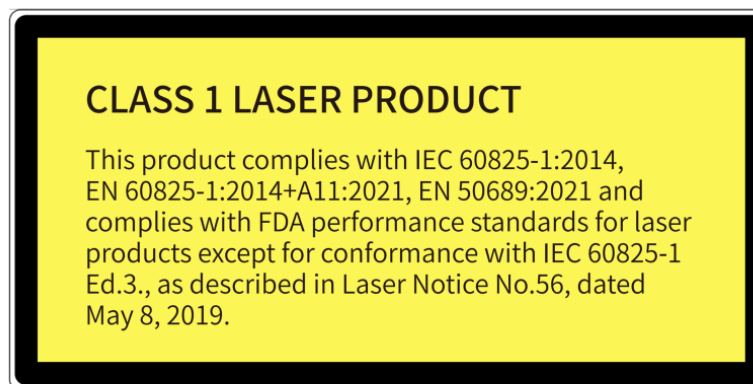

Hot surface



Hot parts!

Burned fingers when handling the parts.

Wait one-half hour after switching off before handling the parts.

Abnormalities

In any of the circumstances listed below, stop using the product immediately:

- If you suspect malfunctions of or damage to the product, with symptoms such as noticeable noise or vibration.
- If you or people in the nearby environment feel discomfort.
- If any device or equipment in the nearby environment malfunctions.

Meanwhile, contact Hesai or an authorized Hesai service provider for more information on product disposal.

Prohibition of disassembly

Unless expressly agreed to in writing by Hesai, do NOT disassemble the product.

Operating environment

Radio frequency (RF) interference

- Before using the product, make sure to read all the signs and notices on the product enclosure (including the nameplate). If specific users require not presenting certification information on the nameplate, please follow the agreed-to arrangements.

Vibration

- If significant mechanical shocks and vibration exist in the product's operating environment, please contact Hesai's technical support to obtain the shock and vibration limits of your product model. Exposure to over-the-limit shocks or vibration may damage the product.
- Make sure to package the product in shock-proof materials to avoid damage during transport.

Explosive atmosphere and other air conditions

- Do NOT use the product in any area where a potentially explosive atmosphere is present, such as where the air contains high concentrations of flammable chemicals, vapors, or particulates (including particles, dust, and metal powder).
- Do NOT expose the product to environments that have high concentrations of industrial chemicals, including liquefied gases that are easily vaporized (such as helium). Such exposure can damage or impair product functionality.

Chemical environment

Do NOT expose the product to corrosive or strong polar chemical environments (such as liquids or gases), including but not limited to strong acids, strong bases, esters, and ethers. This is to avoid damage to the product (including but not limited to water resistance failure).

Ingress protection (IP)

Please check the product's user manual for its IP rating (refer to [Section 1.5 Specifications](#)). Make sure to avoid any ingress beyond that rating.

Operating temperature

Please check the product's user manual for its operating temperature (refer to [Section 1.5 Specifications](#)). Make sure not to exceed the operating temperature range.

Recommended storage conditions

Please store the product in a dry and well-ventilated place. The recommended ambient temperature is $23 \pm 5^{\circ}\text{C}$, with relative humidity between 30% and 70% RH.

Light interference

Certain precision optical instruments may interfere with the laser light emitted from the product. Please check all the instructions for these instruments and take preventive measures if necessary. For example, protective leather covers are provided for certain product models; when these lidars are temporarily not used for measurement, the leather covers can be applied to block laser light emission.

Personnel

Recommended operator qualifications

The product should be operated by professionals with an engineering background or experience in operating optical, electrical, and mechanical instruments. Always follow the instructions in this manual throughout operation. If needed, please contact Hesai for technical support.

Medical device interference

- Some components in the product can emit electromagnetic fields. If the product operators or people in the nearby environment wear medical devices (such as cochlear implants, implanted pacemakers, and defibrillators), make sure to consult the physicians and medical device manufacturers for medical advice, such as determining whether a safe distance from the product is required.
- If you suspect that the product is interfering with your medical device, stop using the product immediately.

Installation and operation

Power supply

- Before powering on the product, make sure the electrical interfaces are dry and clean. Do NOT power on the product in a humid environment.
- Do NOT use damaged or out-of-spec cables or adapters.
- You are recommended to use only the cables and power adapters provided by Hesai. If you are to design, configure, or select the power supply system (including cables) for the product, make sure to comply with the electrical specifications in the product's user manual (refer to [Section 1.5 Specifications](#) and the Power Supply Requirements section if available); for technical support, please contact Hesai.
- Please check [Section 2.2 Electrical interface](#) and strictly follow the instructions on plugging/unplugging the connector. If abnormalities already exist (such as bent pins, broken cables, and loose threads), stop using the product and contact Hesai technical support.

Eye safety

The product is a Class 1 laser product. It satisfies the requirements of:

- IEC 60825-1:2014
- EN 60825-1:2014+A11:2021
- CONSUMER LASER PRODUCT EN 50689:2021
- 21 CFR 1040.10 and 1040.11 except for deviations (IEC 60825-1 Ed.3) pursuant to Laser Notice No.56, dated May 8, 2019.

CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION

- For maximum self-protection, it is strongly warned that users do NOT look into the transmitting laser through a magnifying product (microscope, eye loupe, magnifying glass, etc.).
- This product does not have a power switch. It starts operating once connected to power. During operation, the entire cover lens can be regarded as the product's laser emitting window; looking at the cover lens can be regarded as looking into transmitting laser.

Product enclosure

- Do NOT crush or puncture the product. If the product enclosure is broken, stop using it immediately and contact Hesai technical support.
- Certain product models contain high-speed rotating parts. To avoid potential injuries, do NOT operate the product if the enclosure is loose.
- If the product enclosure consists of fins or grooves, please wear gloves when handling the product. Applying too much pressure with your bare hands may cause cuts, bruises or other injuries.

Drops and burns

The product contains metal, glass, and plastic, as well as sensitive electronic components. If the product is dropped or burnt, stop using it immediately and contact Hesai technical support.

Cover lens



The location of the cover lens is illustrated in [Section 1 Introduction](#).

- Do NOT apply protective film, wax or any other substance on the cover lens.
- To keep the product's cover lens from fingerprints and other stains, do NOT touch the cover lens with bare hands. If the cover lens is already stained, please refer to the cleaning method in [Section 4 Maintenance](#).
- To prevent scratches, do NOT touch the product's cover lens with hard or sharp objects. If scratches already exist, stop using the product and contact Hesai technical support. Severe scratches may affect the quality of the product's point cloud data.

Mounting

- Before operating the product, make sure it is properly and securely mounted. The mounting should prevent the product from leaving its mounting position under external forces (such as collisions, high winds, and stone impacts).
- If the product is installed in a cavity designed as a wet zone, make sure that no water accumulates in the cavity.
- Before installing any exterior part, please ensure that each exterior part and its movable area do not overlap the Field of View (FOV) of the lidar.



The lidar's FOV is the spatial angular range bounded by the horizontal and vertical FOV ranges (see [Section 1.5 Specifications](#)); the distance to the origin of the lidar's coordinate system is not limited. For inquiries about the FOV, please contact Hesai technical support.

Hot surface

During operation or the time period after the operation, the product's enclosure can be hot.

- To prevent discomfort or even burns, do NOT touch the product's enclosure with your skin.
- To prevent fires, make sure to keep flammable materials away from the product's enclosure.

Certain product models support active heating of the cover lens to reduce the impact of ice and frost.

- While active heating is ON, the cover lens can be hot. To prevent discomfort or even burns, avoid direct skin contact with the cover lens.
- When the cover lens is free of ice and frost, you may turn off active heating.

Peripherals

The product may be used along with accessories and devices, such as suction cup mounts, extension cables, power supplies, network devices, GNSS/PTP devices, CAN transceivers, and cleaning equipment.

When selecting a peripheral, please refer to all relevant specifications in the product's user manual or contact Hesai technical support. Using out-of-spec or unsuitable devices may result in product damage or even personal injuries.

Firmware and software upgrading

Make sure to use only the upgrade files provided by Hesai. Make sure to observe all the instructions provided for that upgrade file.

Customized firmware and software

- Before using a customized version of firmware and software, please fully understand the differences in functions and performance between the customized version and the standard version.
- Make sure to strictly follow all the instructions and safety precautions provided for that customized version. If the product does not function as anticipated, stop using the product immediately and contact Hesai technical support.

Point cloud data processing

- Certain product models support one or more point cloud data processing functions, including but not limited to: Noise Filtering, Interstitial Points Filtering, Retro Multi-Reflection Filtering, and Nonlinear Reflectivity Mapping.
- These functions are configurable and are intended only to assist the user in extracting information from the point cloud data. Users are in full control of whether to use any of these functions. Moreover, users are responsible for analyzing the product's intended application scenarios and evaluating the risk of enabling one or more of these functions in combination.
- To learn about the supported functions of a product model, please contact Hesai technical support.

Repair

- Unless expressly agreed to in writing by Hesai, do NOT disassemble, repair, modify, or alter the product by yourself or through any third party. Such a breach:
 - can result in product damage (including but not limited to water resistance failure), property loss, and/or injuries;
 - shall constitute a breach of warranty.
- For more product repair issues, please contact Hesai or an authorized Hesai service provider.

1 Introduction

1.1 Applicability

This manual applies to the following versions:

Software	20.AF.A0.00.01.F or later
Firmware of Sensor	2.a.0283 or later
Firmware of Controller	1.a.0047 or later

1.2 Operating principle

Distance measurement: Time of Flight (ToF)

1. A laser diode emits a beam of ultrashort laser pulses onto the target object.
2. The laser pulses are reflected after hitting the target object. The returning beam is detected by an optical sensor.
3. Distance to the object can be accurately measured by calculating the time between laser emission and receipt.

$$d = \frac{ct}{2}$$

d: Distance

c: Speed of light

t: Travel time of the laser beam

1.3 Basic structure

The basic structure is in [Figure 1](#).

Multiple pairs of laser emitters and receivers are attached to a motor that rotates 360° horizontally.

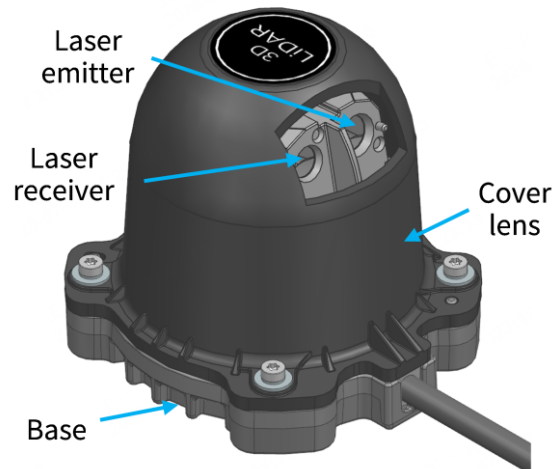


Figure 1. Partial cross-sectional diagram

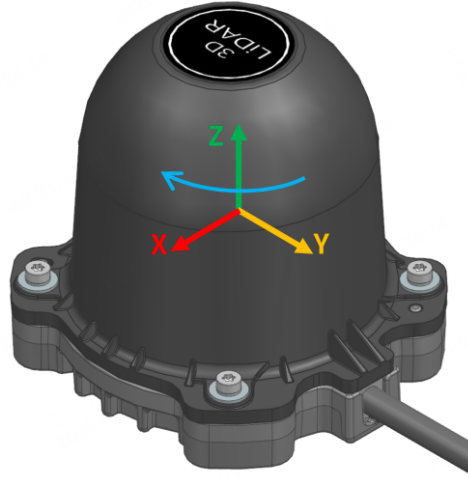


Figure 2. Coordinate system (axonometric view)

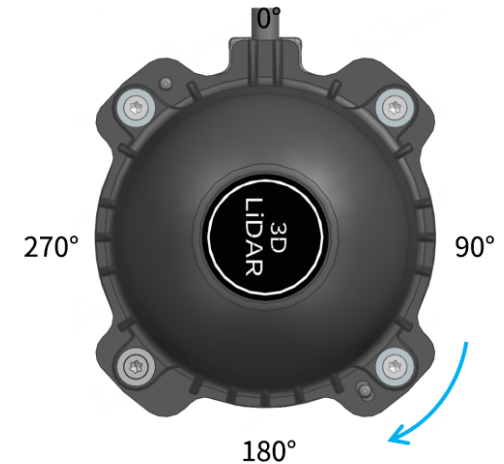


Figure 3. Lidar azimuthal position (top view)

The lidar's coordinate system is illustrated in [Figure 2](#). Z-axis is the axis of rotation.

The lidar's azimuthal position is defined in [Figure 3](#).

- By default, the lidar rotates clockwise in the top view.
- Y-axis corresponds to 0°.
- Each laser channel has an intrinsic azimuth offset. The horizontal center of the emitter-receiver array defines the lidar's azimuthal position.

For example, when the horizontal center passes the 90° position, the lidar is at the 90° position, and the azimuth of the corresponding data block in the Point Cloud Data Packet is 90°.

1.4 Channel distribution

All channels are unevenly distributed, as illustrated in [Figure 4](#).

- The vertical angles indicated in [Figure 4](#) are projections onto the plane; for the design value of each channel's vertical angle in space, see [Appendix A Channel distribution data](#).
- Vertical resolution: See [Section 1.5 Specifications](#).
- Channel number counts from 1, bottom to top.

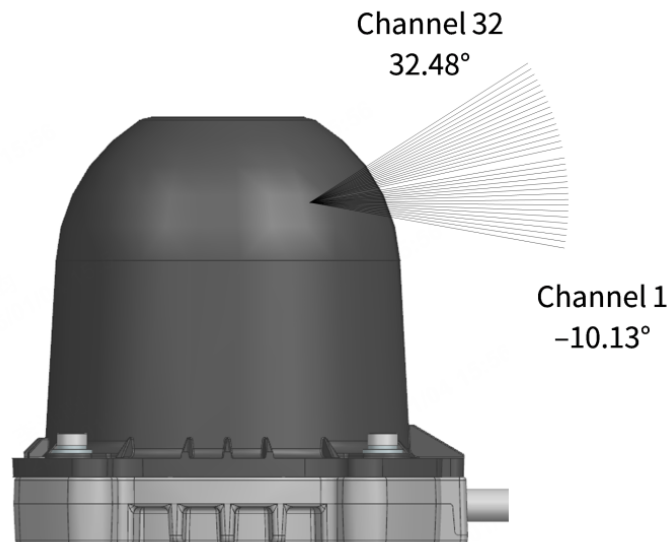


Figure 4. Channel vertical distribution

Each channel has an intrinsic angle offset, both horizontally and vertically. These angles are recorded in this lidar unit's angle correction file.

Get the angle correction file

Use one of these ways:

- Export the file using PandarView 2; see the PandarView 2 User Manual.
- Ask Hesai technical support or your sales representative.

In [Figure 5](#):

- The origin of the lidar's coordinate system is marked as a red dot.
- At the 0° azimuthal position, the optical center (also the center of exit diaphragm) is marked as a yellow dot. All measurements are relative to the optical center.

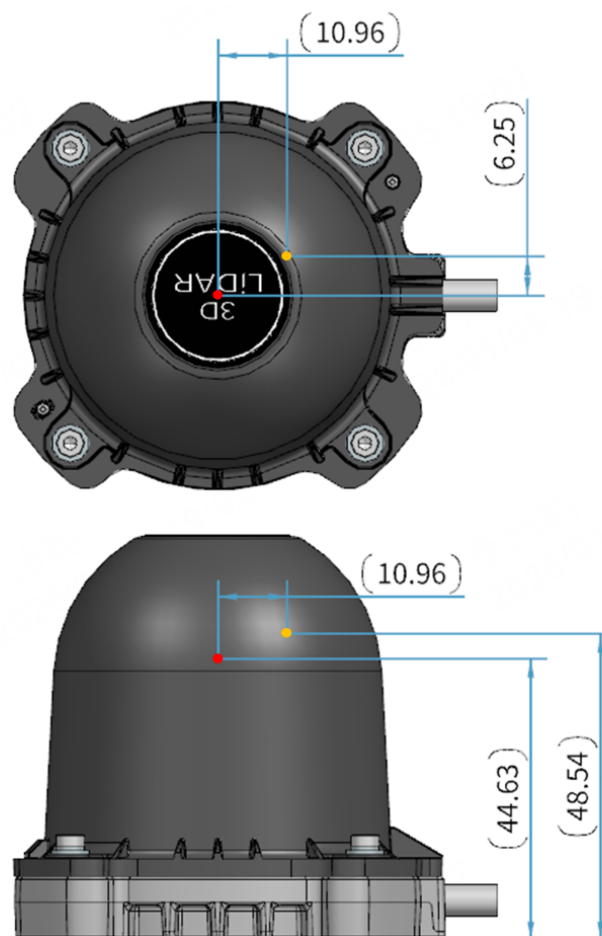


Figure 5. Laser firing position (unit: mm)

1.5 Specifications

SENSOR

Scanning method	Mechanical rotation
Number of channels	32
Instrumented range	0.15 to 65 m
Ranging capability ①	40 m (at 10% reflectivity, Channels 9 to 24) 35 m (at 10% reflectivity, Channels 1 to 8, Channels 25 to 32)
Ranging precision ②	1 cm (typical, 1 σ)
Ranging accuracy	± 3 cm (typical)
Horizontal FOV	360°
Horizontal resolution	0.6° (10 Hz)
Vertical FOV	42.61° (-10.13° to 32.48°)
Vertical resolution	1.38° (average)
Frame rate	10 Hz
Return mode	Single return: Last/Strongest (default)

MECHANICAL/ELECTRICAL/OPERATIONAL

Wavelength	905 nm
Laser class	Class 1 Eye Safe
Ingress protection	IP6K6
Dimensions	Height: 64 mm Bottom: Φ 61.53/75.5 mm

Rated voltage range	DC 12 to 16 V
Power consumption ③	7.5 W
Operating temperature ④	-20°C to 65°C
Storage temperature ④	-40°C to 70°C
Weight	199.7 g

DATA I/O

Data transmission	Ethernet: Standard 100BASE-TX
Measurements	Distance, azimuth, and reflectivity
Valid point rate	192 000 pts/sec
Point cloud data rate ⑤	6.336 Mbps



Specifications are subject to change. Please refer to the latest version of this manual.

Notes to specifications

① Ranging capability

Test conditions: normal incidence, 0 to 100 klx ambient illuminance, 50% probability of detection (PoD)

② Ranging precision

- May vary with range, temperature, and target reflectivity.
- Typical value: Under room temperature, and with target reflectivities of 90%, most of the channels are within this error range.

③ Power consumption

- Typical value, not including accessories such as the connection box
- Test conditions: 12V, room temperature, frame rate 10 Hz
- The external power supply: 0.7 A, 8.4 W

④ Operating temperature and storage temperature

Both refer to ambient air temperature.

⑤ Point cloud data rate

- During operation, the lidar's surface and internal temperatures may exceed the ambient air temperature.
- Given: horizontal FOV (360°), horizontal resolution (0.6° at 10 Hz), frame rate (10 Hz), size of a Point Cloud Data Packet (132 bytes) and the number of blocks in each packet (1).
- At 10 Hz, one return is generated for each 0.6° azimuth; thus 600 (360°/0.6°) returns for each frame and 6000 returns (10 frames) per second.
- Each Point Cloud Data Packet contains one block, and the block stores one return.
- Therefore, $6000/1 = 6000$ packets are transmitted per second, totaling 6000×132 bytes.
- With unit conversion, point cloud average data rate = $6000 \times 132 \times 8 \times 1E-6 = 6.336$ Mbps.

2 Setup

Before operating the lidar, strip away the protective cover on the cover lens.



The information in this section may be different for customized models. The mechanical drawings and data exclusively provided for customized models shall prevail.

2.1 Mechanical installation

2.1.1 Exterior dimensions

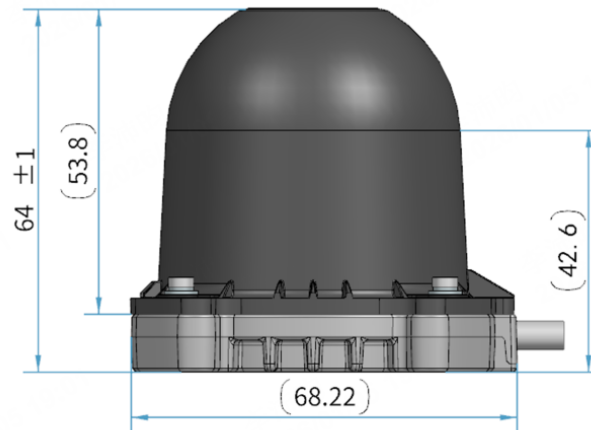


Figure 6. Right side view (unit: mm)

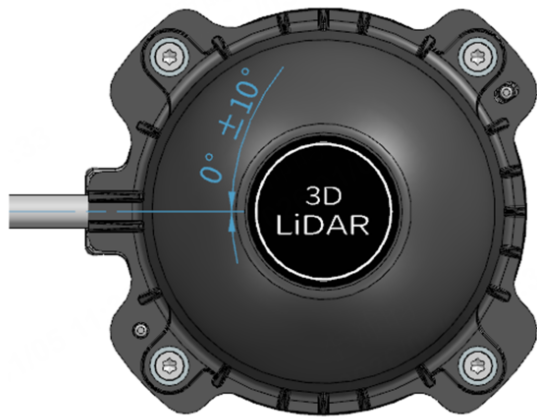


Figure 7. Top view (unit: mm)

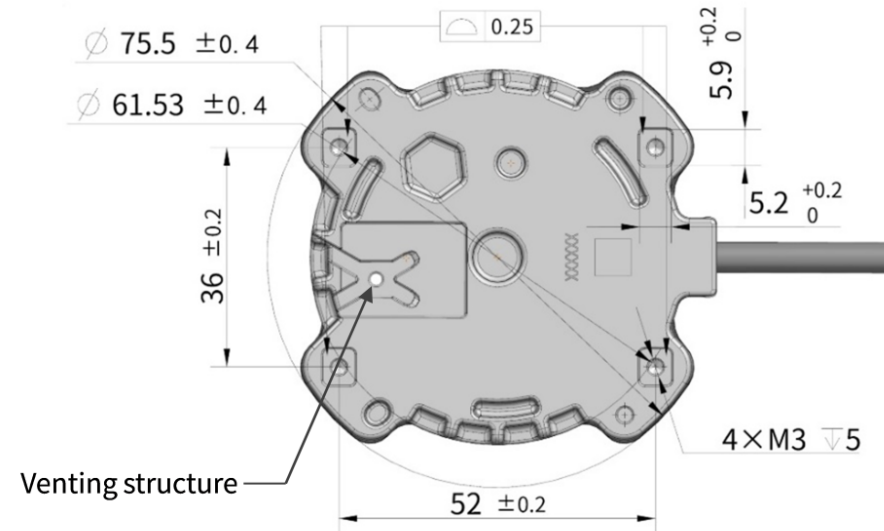


Figure 8. Bottom view (unit: mm)



- Use the four mounting alignment slots on the bottom as the mounting reference surface.
- Recommended installation method: Fully cover the non-optical area (i.e. the cylindrical part at the bottom), and only expose the optical area (i.e. the domed part at the top).
- If other installation methods are used, please contact Hesai technical support.

2.1.2 Recommended installation

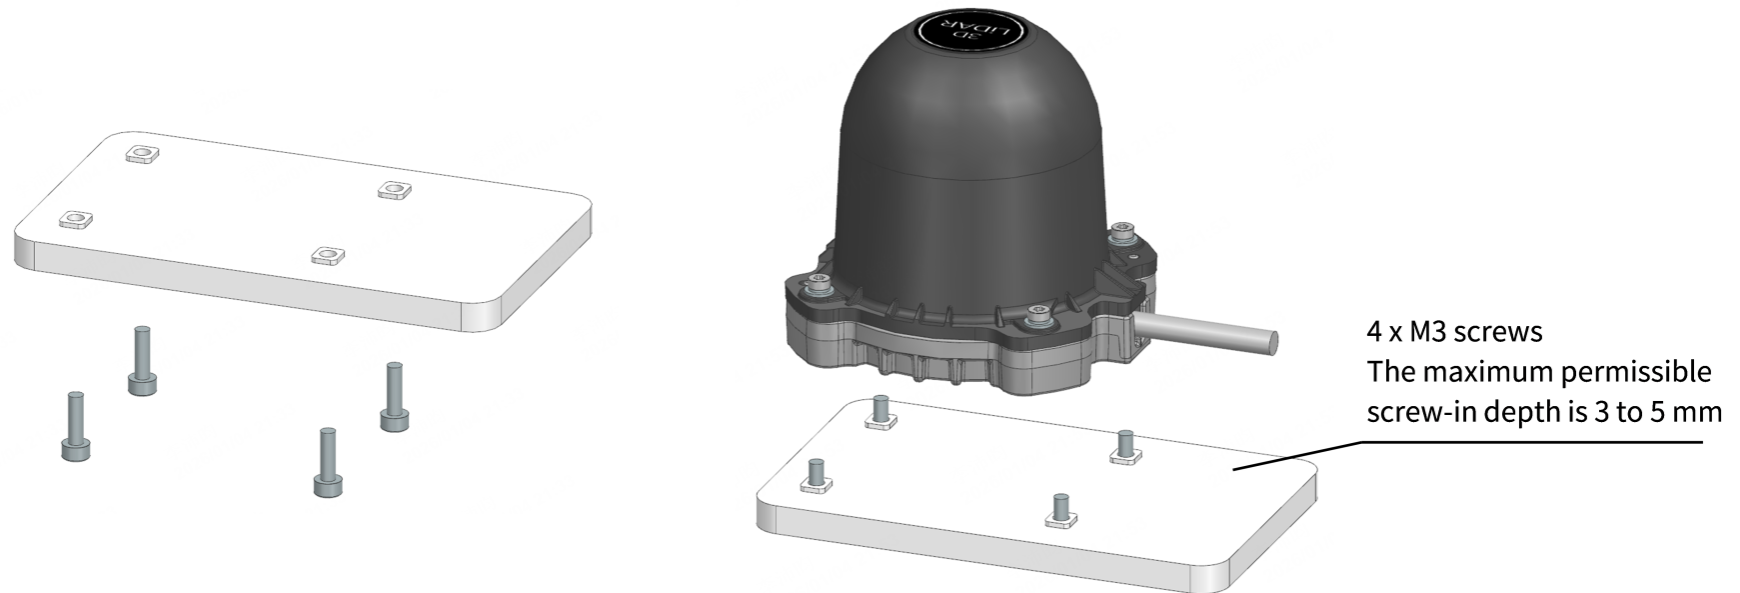


Figure 9. Recommended installation

To maximize data integrity and ESD protection, chassis grounding is strongly recommended:



- Mount the lidar on a properly grounded metal bracket.
- Ensure reliable electrical continuity between the lidar enclosure, the mounting screws, and the bracket.

In installations where chassis grounding is impractical or impossible (e.g., battery-powered or airborne platforms), high-quality shielded twisted pair (STP) Ethernet cables with properly grounded connectors is a recommended alternative.

2.1.3 Notes on screw installation



Strictly follow the screw specifications and installation requirements in [Figure 9](#).

Screw type

SEMS screws (with pre-attached flat washers and lock washers) are recommended. Property class should be at least 4.8.

Screw torque

- The base material of the threaded holes is aluminum alloy, not steel.
- The recommended screw torque: 0.8 to 1 Nm

Thread service life

- Ten times. (Each screwing counts as one time, so as each unscrewing.)
- If threadlocker is used, clean the threaded hole before each retightening. Avoid contact between the cover lens and the cleaner.

2.2 Electrical interface

JST connector Part Number: PUDP-08V-S (female socket, shown as the blue areas below.)

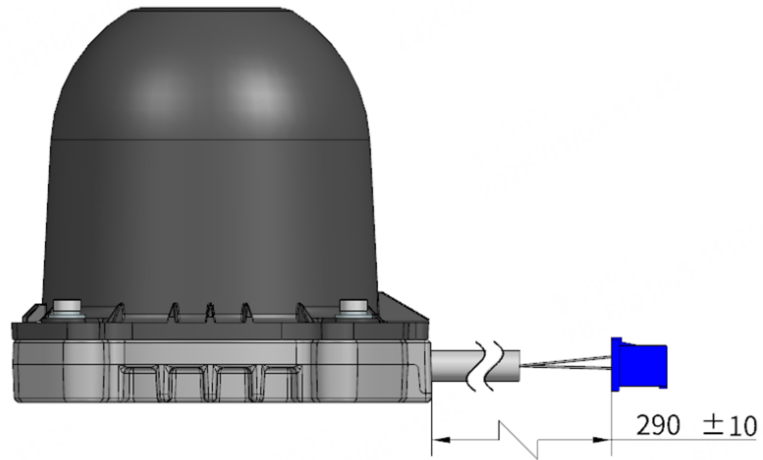


Figure 10. Connector right side view (unit: mm)

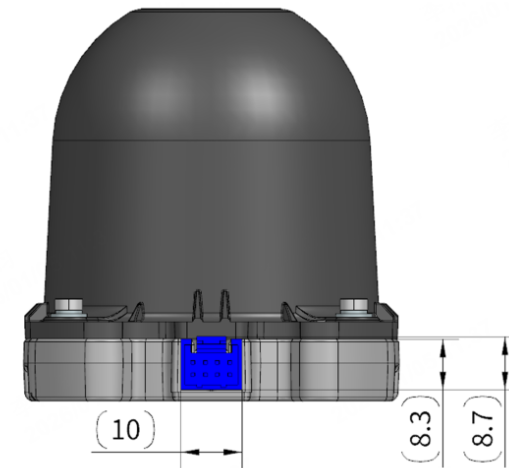


Figure 11. Connector front view (unit: mm)

2.2.1 Pin description

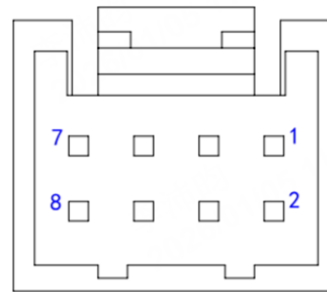


Figure 12. Lidar connector

No.	Direction	Signal	Wire color	Level	Baud rate	Description
1	Input	VCC_14V	Red	12 to 16 V	-	-
2	Input	GND	Black	0 V	-	-
3	Bidirectional (half duplex)	API_RX/DATA_A	White	RS485	5000000	Input data: Upgrade packages
4		API_RX/DATA_B	Green			Output data: • Point cloud data and lidar status • API datagrams (ACK)
5	Input	GNSS_PPS	Blue	3.3 V CMOS	-	-
6	Input	API_TX/GNSS_N MEA	Yellow	3.3 V	9600	Input data: • API datagrams (CMD) • GNSS NMEA (GPRMC or GNRMC)
7	-	Reserved	-	-	-	-
8	-	Reserved	-	-	-	-




- The RS485 signals are powered by 3.3 V:
 - Common-mode voltage $|V_{oc}|$ is 1.65 V.
 - Differential voltage $|V_{od}|$ ranges from 1.3 to 3.3 V.



Avoid touching the reserved wires or ports with bare hands.

Timing requirements of GNSS signals (PPS and NMEA)

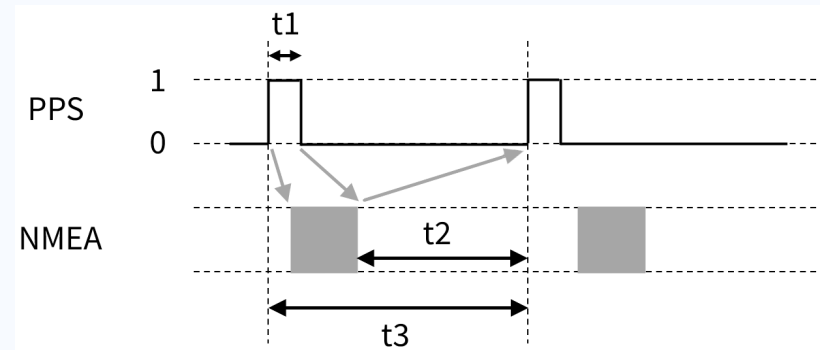

Cycle of the PPS signal	$t_3 = 1 \text{ s} \pm 50 \mu\text{s}$ (rising edge to rising edge)
Pulse width of the PPS signal	$t_1 \geq 1 \text{ ms}$ Recommended range: 10 to 100 ms
Timing relationship	As indicated by the gray arrows, the NMEA signal: - Should start after the PPS rising edge of the current second. - Should end after the PPS falling edge of the current second. - Should end before the PPS rising edge of the next second; $t_2 \geq 500 \text{ ms}$.

2.2.2 Cables

- Users may connect the lidar with or without a connection box.
- Cable between the lidar and the connection box (shown below):
 - Outer diameter (OD): 5 ± 0.20 mm
 - Minimum bend radius: $5 \times OD$

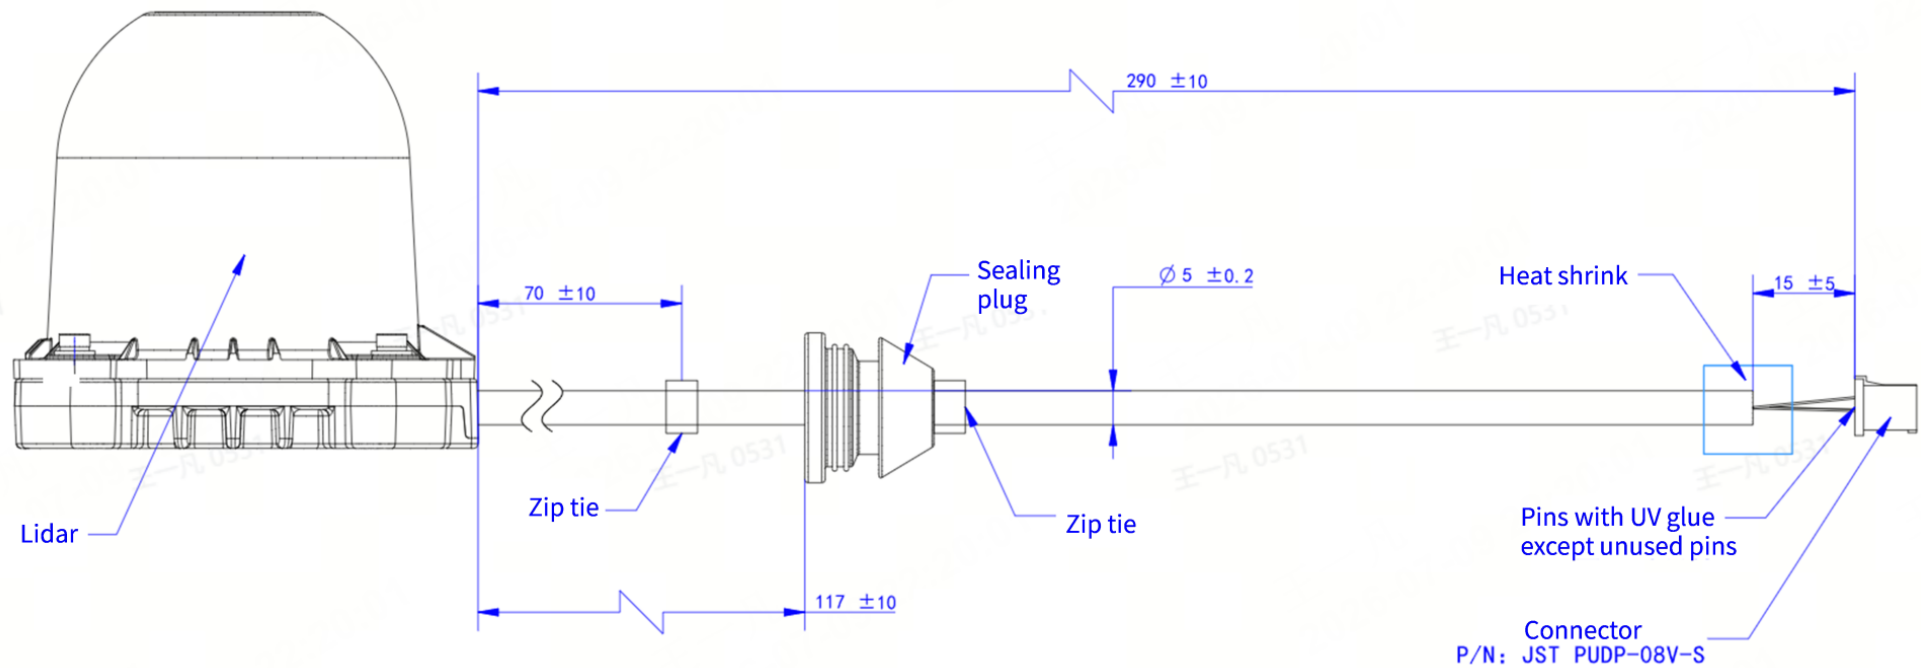


Figure 13. Cable between lidar and connection box (unit: mm)

2.3 Connection box (optional, with Ethernet port)

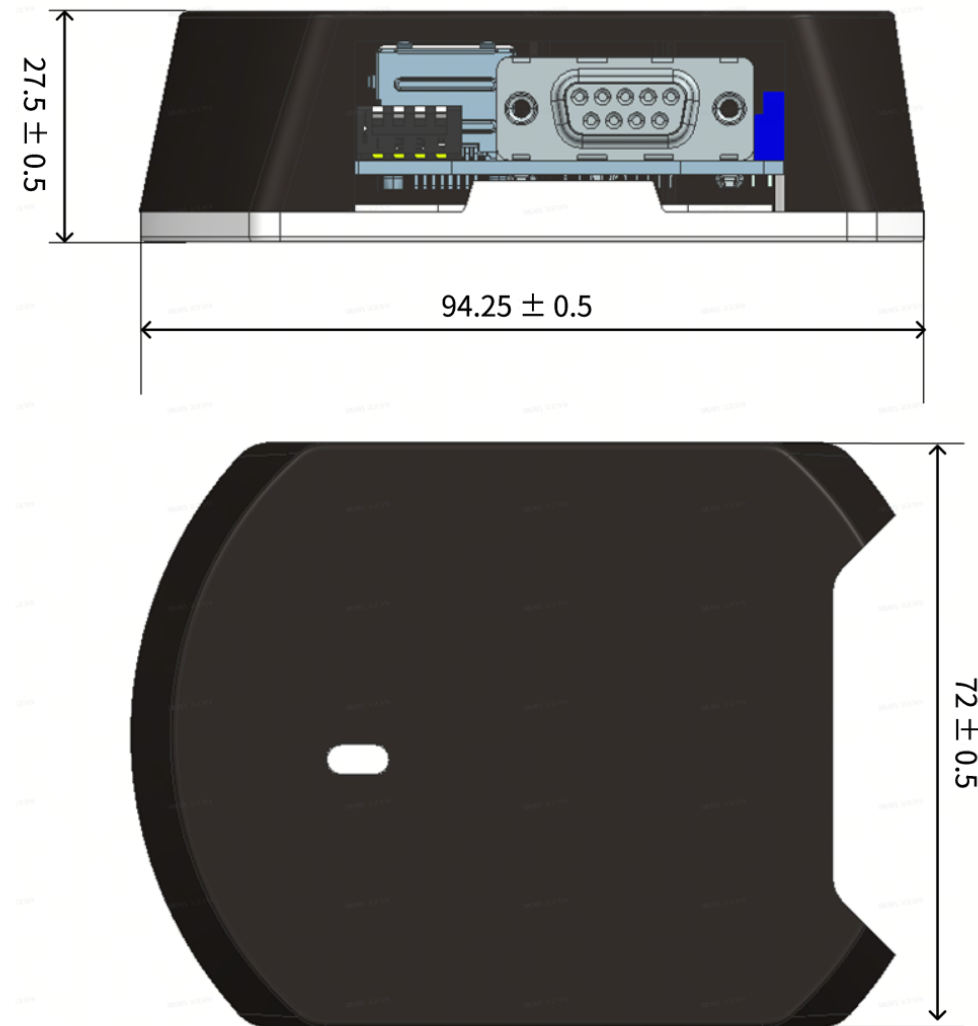


Figure 14. Connection box (unit: mm)

2.3.1 Ports

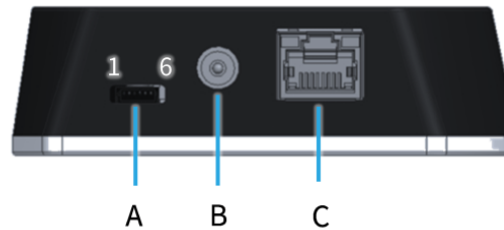


Figure 15. Connection box (front)

Port number	Connection	Description
A	Optional	Connect to an external GNSS module; for time synchronization. Connector Part Number: JST SM06B-SRSS-TB Recommended connector for the external GNSS module: JST SHR-06V-S-B
B	Mandatory	Connect to a 12 to 16 V DC power source.
C	Optional	Connect to the host computer; for Ethernet communication (standard 100BASE-TX).

Port A (left to right):

Pin number	Direction	Signal	Level	Description
1	Input	GNSS_PPS	3.3 V CMOS	-
2	Output	GNSS_5V	5 V	Power for the external GNSS module
3	-	GND	0 V	Ground for the external GNSS module
4	Input	GNSS_NMEA	RS232	-
5	-	GND	0 V	Ground for the external GNSS module
6	-	Reserved	-	Do NOT connect this pin to external signals.

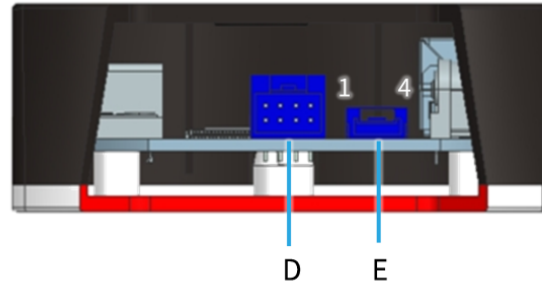


Figure 16. Connection box (left)

Port number	Connection	Description
D	Lidar port	Connect to the lidar connector . Connector Part Number: JST S08B-PUDSS-1
E	Optional	Connect to the host computer; for API communication. Connector Part Number: JST SM04B-GHS-TB Recommended connector for the external module: JST GHR-04V-S



Port A and Port E cannot be used simultaneously.

Port E (left to right):

Pin number	Direction	Signal	Level	Description
1	Input	API_TX	3.3 V CMOS	Use either Pin 1 or Pin 2, not both.
2				
3	-	GND	0 V	Ground
4	-	GND	0 V	Ground

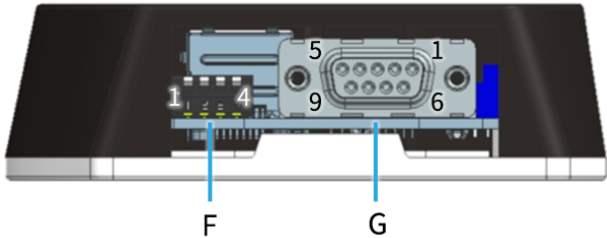


Figure 17. Connection box (back)

Port number	Connection	Description
F	-	DIP Switch
G	Optional	Connect to the host computer. Connector Part Number: Amphenol LD09S33E4GX00LF

Port F (left to right):

Toggle number	Description
1	Reserved
2	Reserved
3	Used to configure the external source of absolute time Up — PTP (802.1AS, 802.1AS AUTOSAR) Down — GNSS i • In serial communication mode, the external source of absolute time is fixed to GNSS. • In Ethernet communication mode: ◦ This toggle is effective. ◦ If no external time source is available, select GNSS (toggle down).

Toggle number	Description
4	Used to configure the communication mode Up — Ethernet communication (Port C transmits point cloud data and API commands) Down — Serial communication (Port G transmits point cloud data; Port E API commands)  • Port C and Port E cannot be used simultaneously. • When the external source of absolute time is GNSS (see Toggle 3), the lidar cannot transmit API commands, neither via Port C nor Port E.

Port G (right to left, top to bottom):

Pin number	Direction	Signal	Level	Description
1	Bidirectional (half duplex)	API_RX/DATA+	RS485	-
2		API_RX/DATA-		
5	-	GND	0 V	Ground for the external GNSS module
9	Input	GNSS_5V	5 V	Power for the external GNSS module

2.3.2 Connection



The Lidar's appearance is for reference only. The actual product may vary.

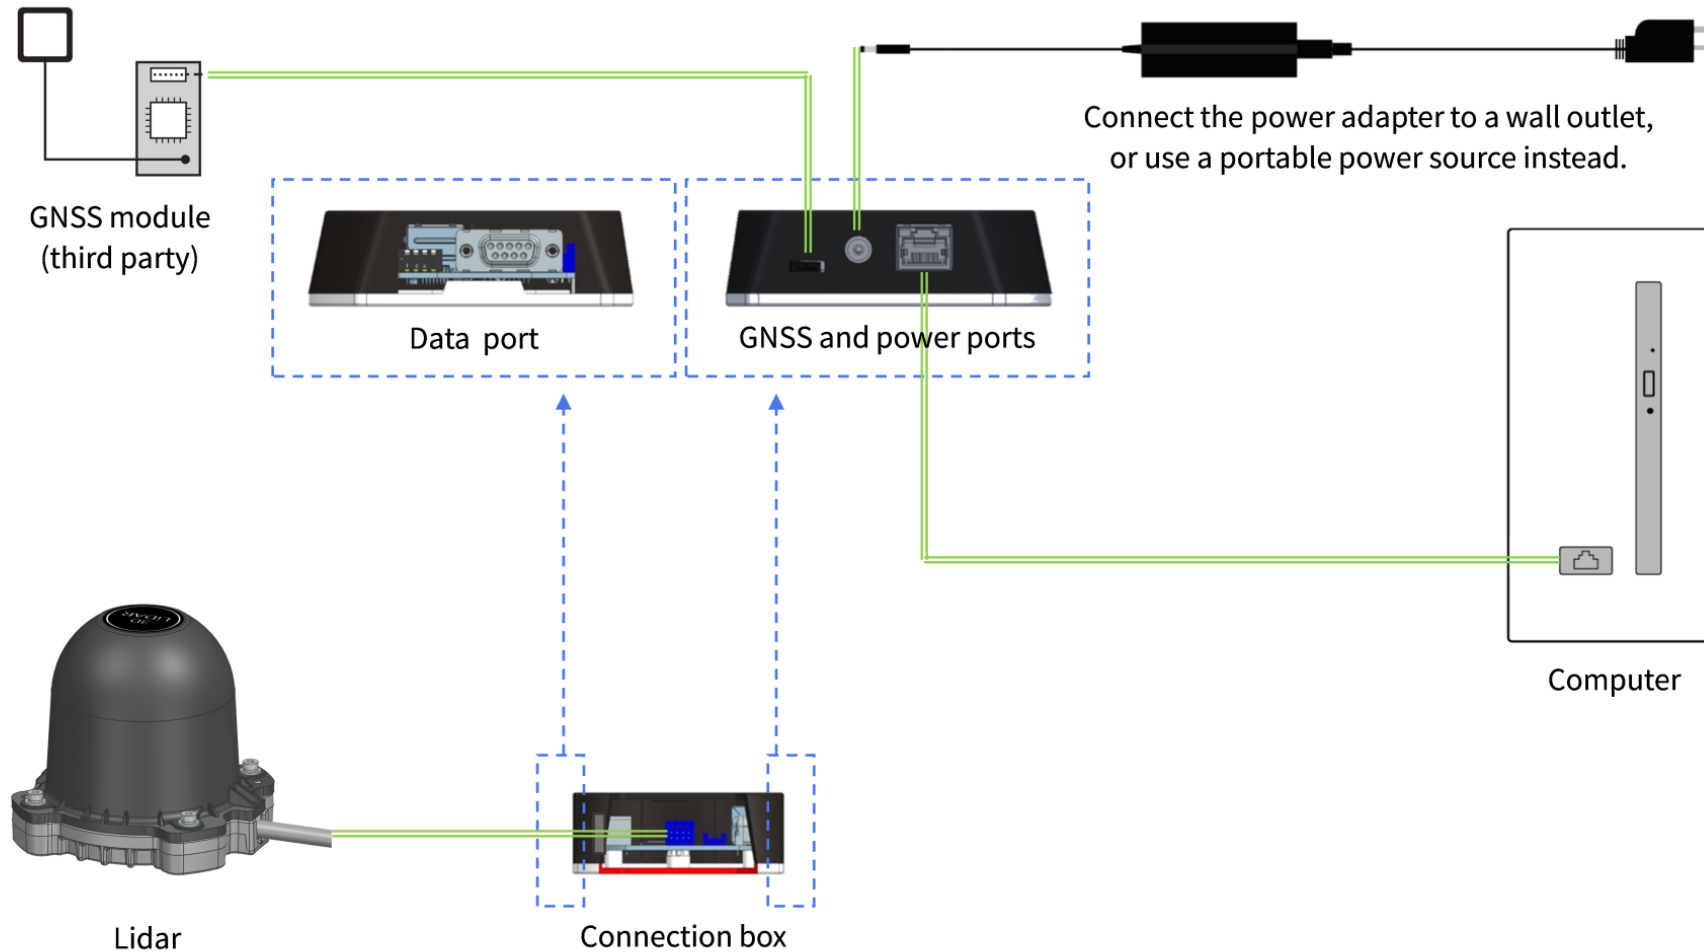


Figure 18. Connection box connection (Ethernet communication)



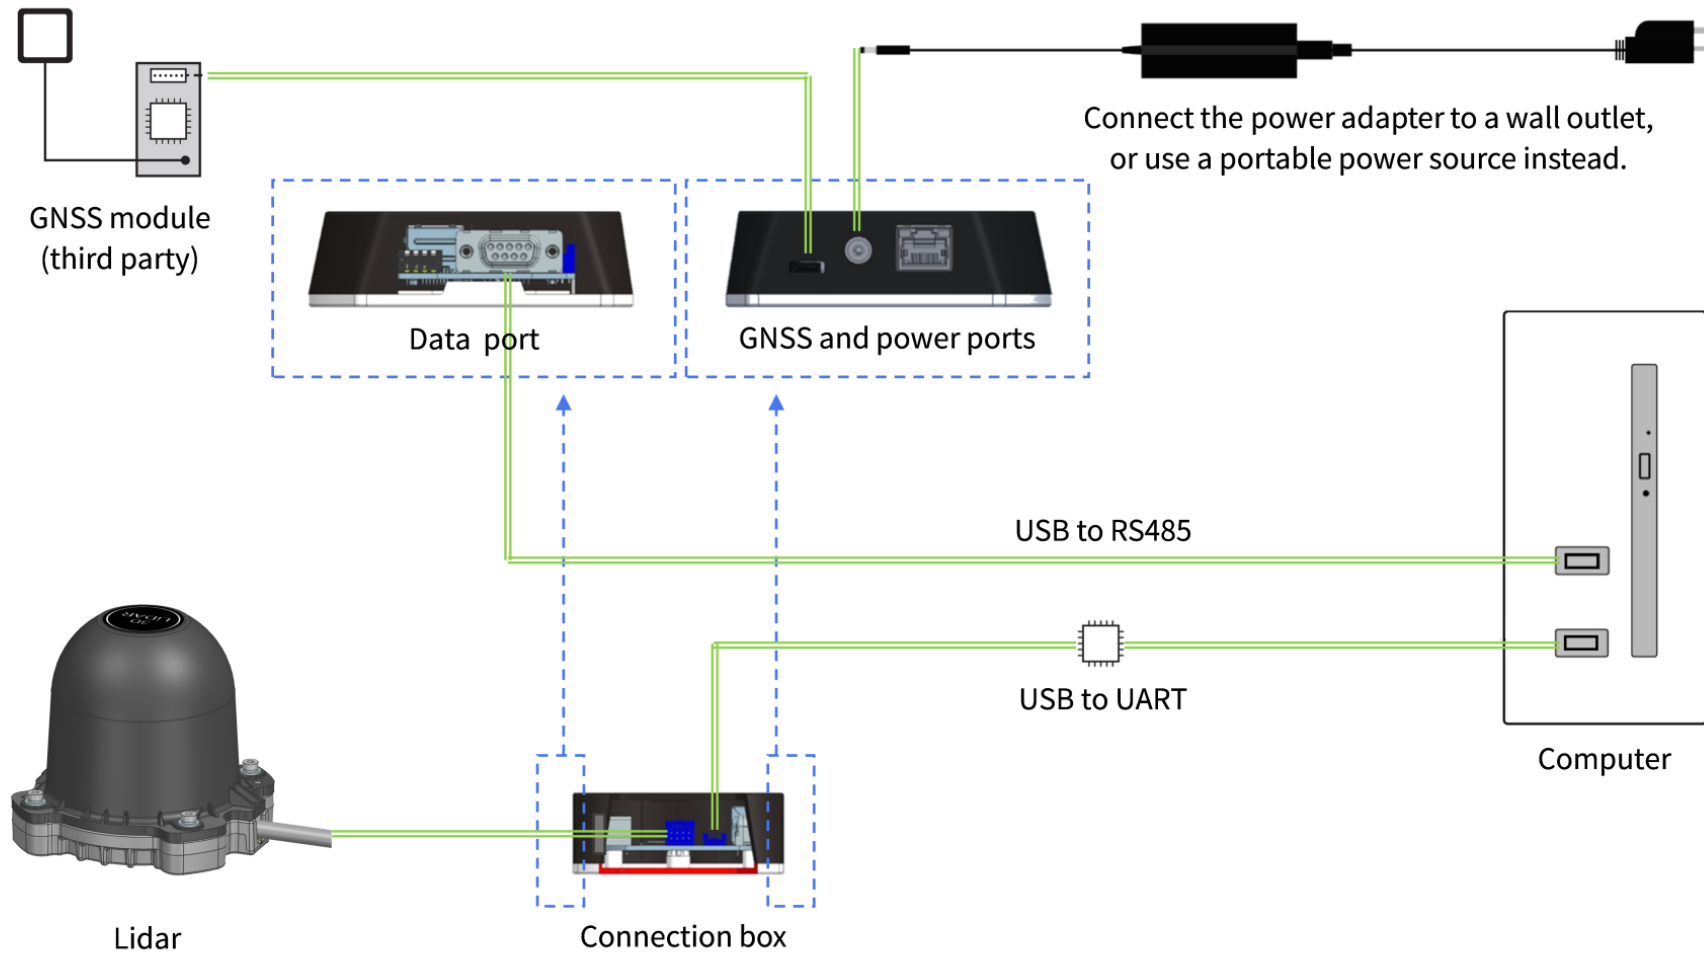


Figure 19. Connection box connection (serial communication)



2.4 Network settings on the host computer (Ethernet communication)

2.4.1 In Windows

1. [Control Panel] > [Network and Internet] > [Network and Sharing Center] > [Change adapter settings].
2. Right-click [Ethernet] or [Ethernet X] which shows Ethernet connection (with no red cross at the bottom left of the icon) > Select [Properties].

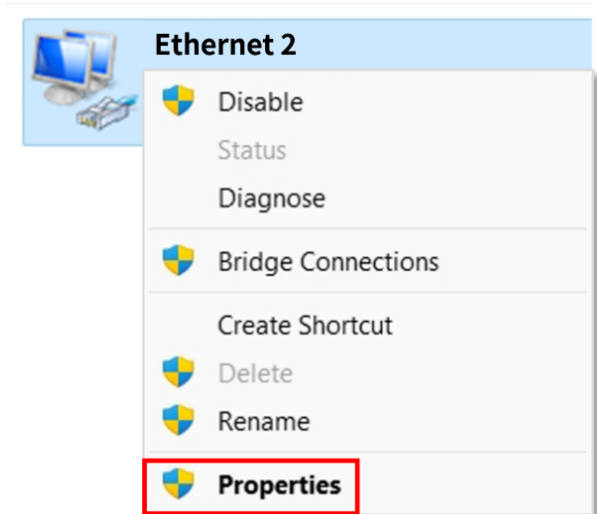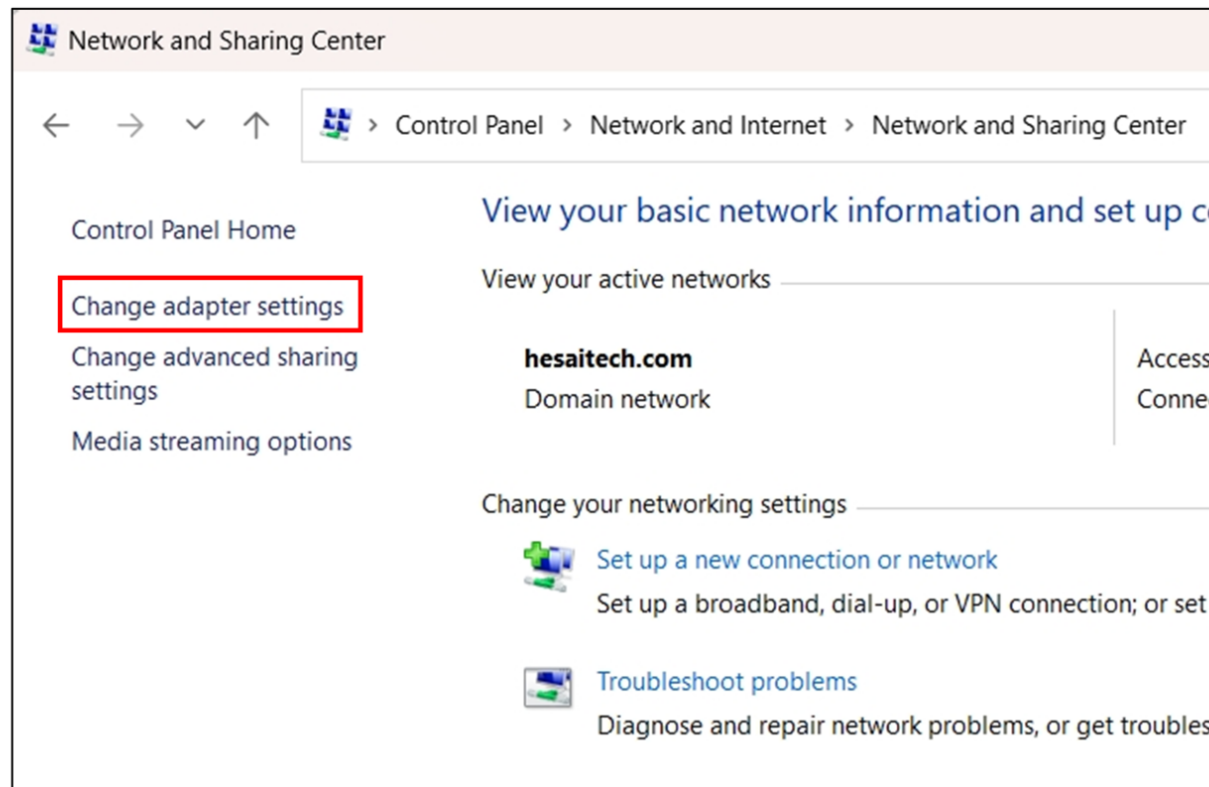

3. Double-click [**Internet Protocol Version 4 (TCP/IPv4)**].
4. Select [**Use the following IP addresses**] > Input the host computers's IP address and subnet mask.

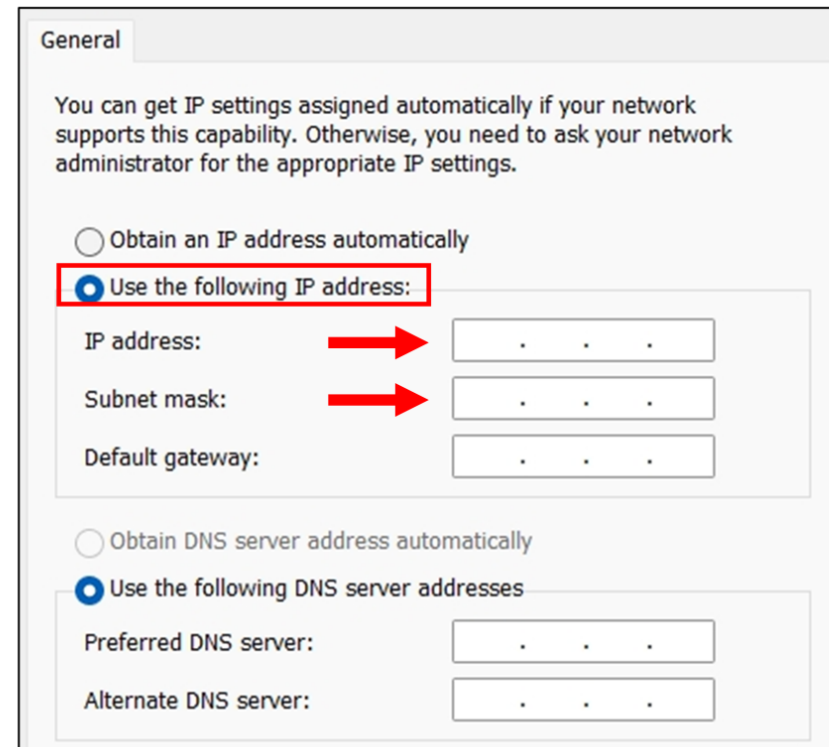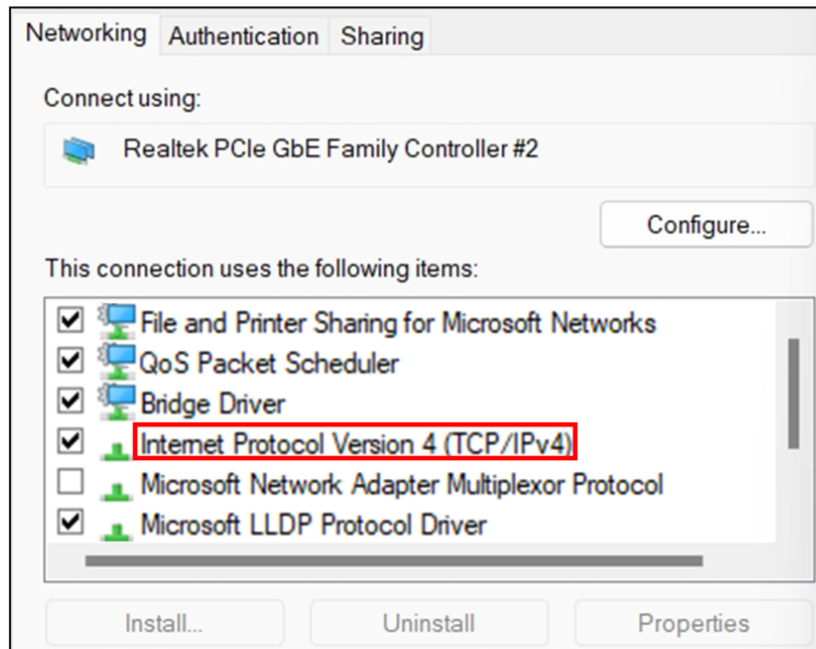

Ping command can be used to check the connection:




1. Press Win + R to open the Run dialog box.
2. Enter "cmd" and click [**OK**] to open the Command Prompt.
3. Enter "ping na" and check the output.

2.4.2 In Ubuntu

1. Find the host computer's network interface name.

Method 1

- a. Open **Settings — Network**.
- b. Look for the interface whose status is "Connected".
The name in parentheses after "Ethernet" is the network interface name.

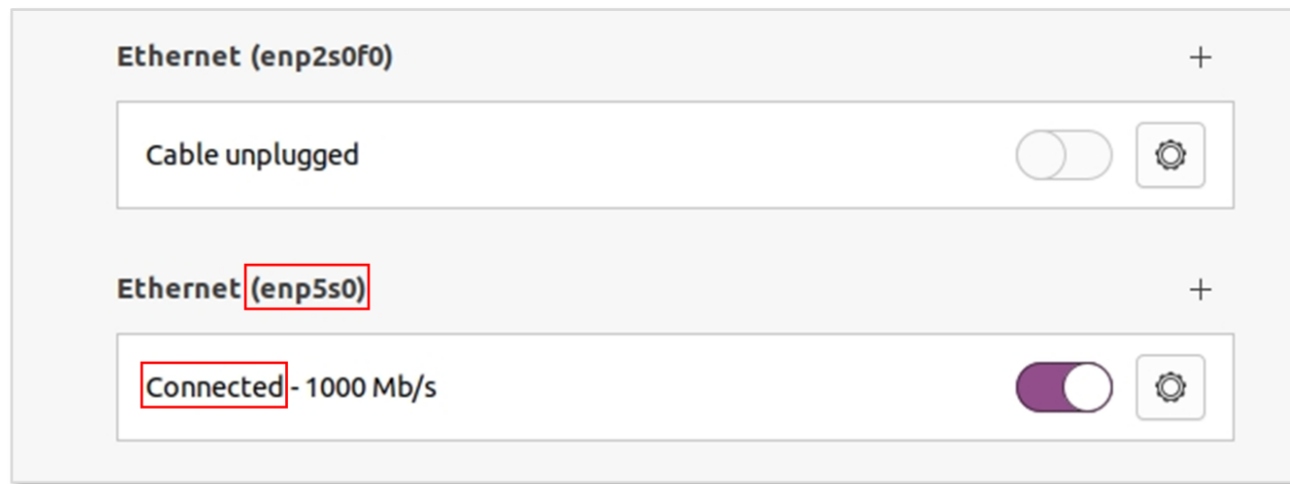

Method 2

- a. Open a terminal and run this command:

```
ifconfig
```

- b. Look for the interface with non-zero RX packets and bytes.
(In the example below, **enp5s0** shows non-zero Rx packets and bytes, indicating active data transmission.)

```
> ifconfig
docker0: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
    inet [REDACTED] netmask [REDACTED] broadcast [REDACTED]
    ether [REDACTED] txqueuelen 0 (Ethernet)
    RX packets 0 bytes 0 (0.0 B)
    RX errors 0 dropped 0 overruns 0 frame 0
    TX packets 0 bytes 0 (0.0 B)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

enp2s0f0: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
    ether [REDACTED] txqueuelen 1000 (Ethernet)
    RX packets 0 bytes 0 (0.0 B)
    RX errors 0 dropped 0 overruns 0 frame 0
    TX packets 0 bytes 0 (0.0 B)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

enp5s0: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
    ether [REDACTED] txqueuelen 1000 (Ethernet)
    RX packets 267706980 bytes 300970909734 (300.9 GB)
    RX errors 0 dropped 0 overruns 0 frame 0
    TX packets 3184 bytes 590575 (590.5 KB)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
```


2. Run this command in the terminal:

```
sudo ifconfig ${interface_name} ${ip_addr}
```

- Replace `${interface_name}` with the host computer's network interface name.
- Replace `${ip_addr}` with the host computer's IP address.

2.5 Tools



- The following tools are supported by most models. Contact Hesai technical support to confirm applicability.
- For a customized model or an early prototype, contact Hesai technical support to confirm applicability.

Tool	Purpose	Where to find it
PandarView 2 (point cloud visualization software)	To record and display point cloud data.	Public versions (for selected models only): https://www.hesaitech.com/downloads/
LidarUtilities (software for host computers)	To set parameters, check device info and status, or upgrade firmware and software.	Contact Hesai technical support for details.
API		Contact Hesai technical support to confirm the API applicable to this model and obtain the corresponding documentation.
Software development kits (SDKs) and ROS drivers	To assist development.	Public versions (for selected models only): https://github.com/HesaiTechnology
Web control	To set parameters, check device info and status, or upgrade firmware and software.	If this model supports web control, see the "Web Control" section of this manual.

3 Data structure

Unless otherwise specified, all the multi-byte fields are unsigned values transmitted in little-endian format.



- Point Cloud Data Packet rate: 6000 Hz
- IMU Data Packet rate: 200 Hz

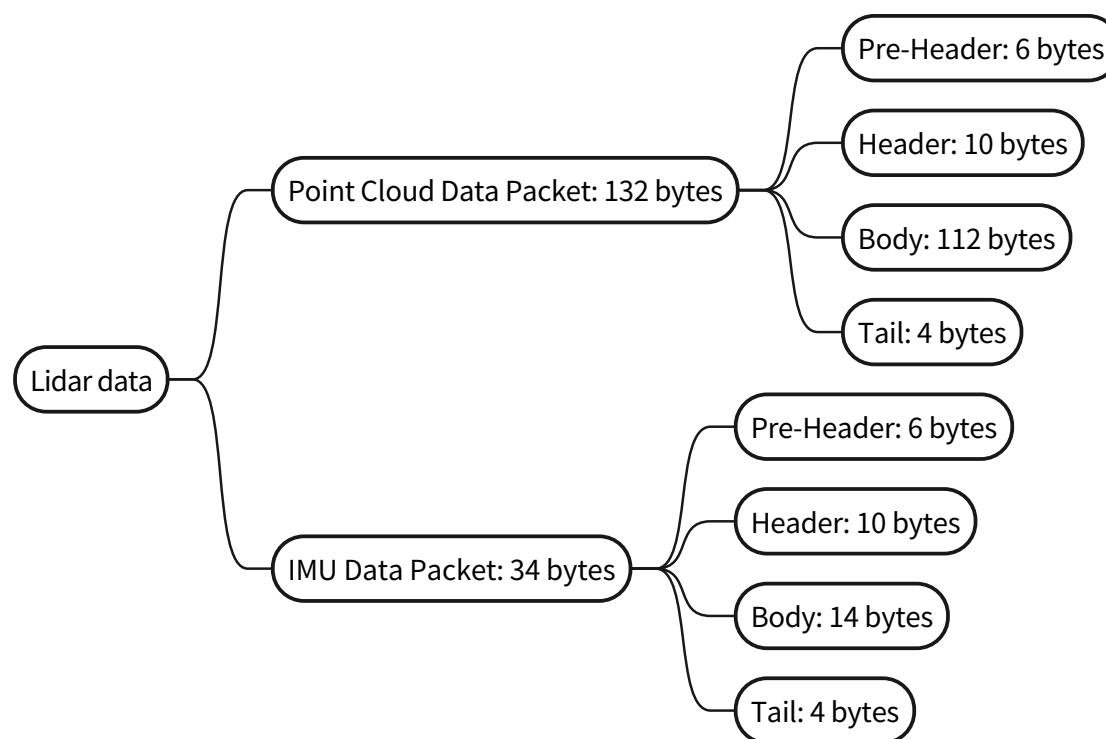


Figure 20. Data structure

3.1 Point Cloud and IMU Data Packets

3.1.1 Pre-Header

Field	Byte(s)	Data type	Description
Start of Packet	1	uint8	0xEE
Start of Packet	1	uint8	0xFF
Protocol Version Major	1	uint8	Main class of the point cloud UDP packet structure Current value: 0x01
Protocol Version Minor	1	uint8	Subclass of the point cloud UDP packet structure Current value: 0x0C
Reserved	1	-	-
Data Type	1	uint8	0 — Body (for Point Cloud Packets) 1 — Body (for IMU Data Packets)

3.1.2 Header

Field	Byte(s)	Data type	Description	
Date & Time	6	uint8[6]	Whole second part of the Coordinated Universal Time (UTC) of this data packet	
			Each byte	Range (decimal)
			Year (current year minus 1900)	≥70
			Month	1 to 12
			Day	1 to 31
			Hour	0 to 23
			Minute	0 to 59
			Second	0 to 59
			UTC Fractional Seconds	4

3.1.3 Body (for Point Cloud Packets)

Field	Byte(s)	Data type	Description
Azimuth 1	2	uint16	Low-resolution part of the encoder angle Unit: 0.01°
Block	96	(uint16 + uint8)[32]	Measurements made by each channel (starting from Channel 1) (see Each channel in the block).
Cover Lens Contamination Level	8	uint8[8]	Bits [0:1], [2:3], ..., and [62:63] correspond to Channels 1 to 32, respectively. From Level b-00 to Level b-11, the optical window becomes more contaminated.
Lidar State	1	uint8	0x00 — Normal operation 0x01 — High temperature
TDM ID	1	-	Time division multiplexing (TDM) ID

Field	Byte(s)	Data type	Description														
TDM Data	2	-	TDM data														
			<table><tr><th>TDM ID</th><th>TDM Data</th></tr><tr><td>0x00</td><td>Motor speed Unit: 0.1 RPM</td></tr><tr><td>0x0F to 0x0C</td><td>Software version, in ASCII</td></tr><tr><td>0x13 to 0x10</td><td>Firmware version, in ASCII</td></tr><tr><td>0x19</td><td>Temperature headroom (Max. allowable temperature – current temperature) Unit: 0.01°C</td></tr><tr><td>0x1C</td><td>IMU acceleration unit Unit: 0.001mg</td></tr><tr><td>0x1D</td><td>IMU angular velocity unit Unit: 0.01 mdps</td></tr></table>	TDM ID	TDM Data	0x00	Motor speed Unit: 0.1 RPM	0x0F to 0x0C	Software version, in ASCII	0x13 to 0x10	Firmware version, in ASCII	0x19	Temperature headroom (Max. allowable temperature – current temperature) Unit: 0.01°C	0x1C	IMU acceleration unit Unit: 0.001mg	0x1D	IMU angular velocity unit Unit: 0.01 mdps
			TDM ID	TDM Data													
			0x00	Motor speed Unit: 0.1 RPM													
			0x0F to 0x0C	Software version, in ASCII													
			0x13 to 0x10	Firmware version, in ASCII													
			0x19	Temperature headroom (Max. allowable temperature – current temperature) Unit: 0.01°C													
			0x1C	IMU acceleration unit Unit: 0.001mg													
			0x1D	IMU angular velocity unit Unit: 0.01 mdps													
For more details, see examples .																	
UDP Sequence	2	uint16	Sequence number of this UDP packet Range: 0 to 0xFF FF														

Example: Software version

TDM ID	TDM Data in little-endian	ASCII
0x0F	0x30 30	00
0x0E	0x2E 30	.0

TDM ID	TDM Data in little-endian	ASCII
0x0D	0x34 2E	4.
0x0C	0x34 20	4 (trailing space emitted)

Thus, the software version is "00.04.4". The firmware version can be analyzed similarly.

Example: Temperature headroom

TDM ID	TDM Data in little-endian
0x19	0x12 34 (4660)

Thus, the temperature headroom is 46.6°C.

Each channel in the block

Field	Byte(s)	Description			
Channel 1	3	Measurements of Channel 1			
		Field	Byte(s)	Data type	Description
		Distance	2	uint16	Object distance = Distance × 4 mm
		Reflectivity	1	uint8	Reflectivity = Reflectivity Field × 1% Range: 0 to 255
Channel 2	3	Measurements of Channel 2			
...	...	...			
Channel 32	3	Measurements of Channel 32			

3.1.4 Body (for IMU Data Packets)

Field	Byte(s)	Data type	Description
IMU X Axis Acceleration	2	int16	Acceleration of the X-axis, measured by the IMU Unit: see IMU acceleration unit .
IMU Y Axis Acceleration	2	int16	Acceleration of the Y-axis
IMU Z Axis Acceleration	2	int16	Acceleration of the Z-axis
IMU X Axis Angular Velocity	2	int16	Angular velocity of the X-axis, measured by the IMU Unit: see IMU angular velocity unit .
IMU Y Axis Angular Velocity	2	int16	Angular velocity of the Y-axis
IMU Z Axis Angular Velocity	2	int16	Angular velocity of the Z-axis
IMU Sequence	2	uint16	Sequence number of this IMU packet Range 0 to 0xFF FF

3.1.5 Tail

Field	Byte(s)	Data type	Description
CRC	4	uint32	CRC-32/MPEG-2 checksum of the packet (from Pre-Header to Body) For IMU Data Packets, pad the CRC calculation range with two 0x00 bytes (to make it a smallest multiple of 4). Then, calculate the CRC .

3.1.6 Point cloud data analysis method

Take **Channel 5** in **Block 1** as an example.

Analyze the vertical angle of a data point

The designed vertical angle of **Channel 5** is -4.6° , according to [Appendix A Channel distribution data](#).



- The accurate vertical angles are recorded in the angle correction file of this lidar; see [Get the angle correction file](#).
- 0° is the horizontal direction. The upward direction is defined as positive; see [Figure 4. Channel vertical distribution](#).

Analyze the horizontal angle of a data point

Y-axis is the 0° position. The clockwise direction (in the top view) is defined as positive; see [Figure 3. Lidar azimuthal position \(top view\)](#).

Horizontal angle = ① + ②

① Azimuth of the current block (see the **Azimuth 1** field in [Section 3.1.4 Body \(for IMU Data Packets\)](#))

② Azimuth offset of the current firing channel (3.25° for **Channel 5**, according to [Appendix A Channel distribution data](#))




The accurate azimuth offset is recorded in this lidar unit's angle correction file; see [Get the angle correction file](#).

Analyze the distance of a data point

See the **Distance** field of **Block 1: Channel 5** in [Section 3.1.4 Body \(for IMU Data Packets\)](#).

Draw the data point in a spherical or rectangular coordinate system

In a spherical coordinate system, the vertical and horizontal angles are defined in the figure below.

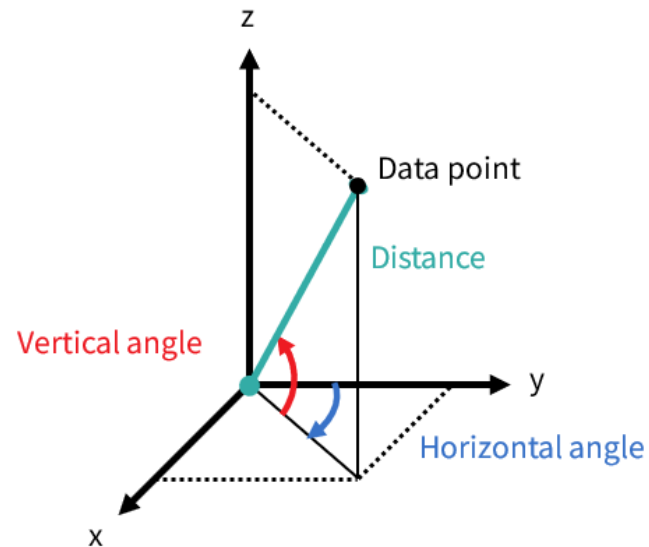

Obtain the real-time point cloud data by analyzing and drawing every data point in each frame.

4 Maintenance

The lidar's cover lens is made of plastic (polycarbonate, PC).

- Do NOT wipe the cover lens when it is dry, nor use abrasive cleaners. Doing so can damage the optical coating.
- Do NOT use organic cleaners, which can damage the cover lens and even cause cracking.
 - Organic cleaners include but are not limited to tar removers, self-cleaning agents, adhesive removers, coating removers, foam cleaners, iron powder removers for car paint, glass cleaners, thinning agents, de-icers, paint surface treatment agents, alcohol, and vinegar.
 - If organic cleaners may be present when cleaning the equipment or performing related operations, please protect the cover lens to prevent any contact with organic cleaners.
- Do NOT apply excessive force to the lidar, as this can damage the cover lens.
 - Using automatic cleaning devices that are not specifically designed for lidars may pose risks. Please contact Hesai technical support for assessment.
 - Do NOT use sharp objects (such as knives or metal tweezers) or hard brushes (such as stiff nylon brushes or wire brushes) to scratch the cover lens cover surface. Such actions may damage the cover lens surface, and in severe cases, may cause malfunction.
- After prolonged exposure to strong sunlight and high temperatures, the cover lens should NOT be cleaned immediately.
- If snow or ice accumulates on the cover lens, do NOT use a pressure washer or ice scraper.
 - A small broom is recommended to remove snow.
 - A solvent-free (i.e., free of organic solvents) ice removal spray is recommended to remove ice; alternatively, wait for the ice to melt by itself.
- Do NOT wax the cover lens.



Please regularly check on the cover lens, considering your use frequency, storage environment, and climate conditions.



- If foreign objects (such as dust, fingerprints, or oil stains) are found on the cover lens, make sure to clean them.
- If corrosive foreign objects (such as insect remains, bird droppings, tree resin, road dust, industrial dust, asphalt, soot particles, and road salt) are found on the cover lens, make sure to clean them immediately.

Cleaning procedure

1. Make sure the lidar is powered OFF.
2. Choose an appropriate cleaning agent:
 - For light stains, use room temperature water.
 - For heavier stains, use a mild soap solution (no more than two tablespoons of soap per quart or liter of water).
 - For stubborn stains, use a solvent-free (i.e., free of organic solvents), pH-neutral detergent at room temperature, such as car shampoo.
3. Take a clean soft sponge or anti-static microfiber cloth, dampen it with the chosen cleaning agent, and gently wipe the dirty area on the cover lens back and forth.
4. For stubborn stains, cover the dirty area with the dampened sponge or cloth to soften the stains before wiping.
5. Immediately after removing the stains, rinse the cover lens with clean water. Then, use a clean soft sponge or microfiber cloth to gently wipe away any remaining liquid (which may contain residual cleaning agents or contaminants).

5 Troubleshooting

If the following procedures cannot solve your problem, please contact Hesai technical support.

Symptoms	Points to check
Indicator light is off on the connection box.	Make sure that the following conditions are met: • The power adapter is properly connected and in good condition. • The connection box is intact. • The input voltage and input current satisfy the requirements in Section 2.3 Connection box (optional, with Ethernet port). Afterward, power on the lidar again and check if the symptom persists.
Motor is not running.	Make sure that the following conditions are met: • The power adapter is properly connected and in good condition. • The input voltage and input current satisfy the requirements in Section 1.5 Specifications. • If a connection box is used, the connection box is intact. Afterward, power on the lidar again and check if the symptom persists.
Motor is running, but no output data is received (neither by a serial port monitor software nor by PandarView 2).	Make sure that the following conditions are met: • RS485 cable is properly connected, and the communication settings are correct. • The lidar is emitting laser light; this can be confirmed using an infrared camera, an infrared sensor card, or a phone camera without an IR-cut filter. Afterward, power on the lidar again and check if the symptom persists.

Symptoms	Points to check
Point cloud is abnormal, showing obviously misaligned points, flashing points, or incomplete FOV.	Make sure that the following conditions are met: • The lidar's cover lens is clean. If not, refer to Section 4 Maintenance for the cleaning method. • The lidar's angle correction file is applied (refer to PandarView 2 User Manual). • Spin Rate is steady; this can be confirmed either by checking the Motor Speed field (if available) in Point Cloud Data Packets, or by using PandarView 2. Afterward, check for packet loss. If no packet is lost yet the point cloud flashes, try these steps: 1. Update PandarView 2 to the latest version (please contact Hesai technical support to obtain it). 2. Restart the computer. If the point cloud is still abnormal, try these steps: 1. Connect the lidar to another computer, or use another RS485 to USB converter. 2. Power on again and check if the symptom persists.
The number of data packets received is abnormal, indicating missing packets.	1. Connect the computer to no other devices but the lidar and check for packet loss. 2. Power on the lidar again and check if the symptom persists.
GNSS cannot be locked.	Make sure that the following conditions are met: • GNSS receiver is properly connected. • PPS signal is connected to the lidar. • The GNSS signals satisfy the electrical requirements in Section 2.2 Electrical interface and Section 2.3 Connection box (optional, with Ethernet port). Afterward, power on the lidar again and check if the symptom persists.

Appendix A: Channel distribution data

Notes to the table

- Channel number** Counts from 1, bottom to top.
- Angular position** Design values of each channel's horizontal (azimuth) angle and vertical (elevation) angle.
- The accurate values are recorded in this lidar unit's angle correction file.
 - To analyze point cloud data, refer to [Section 3.1.6 Point cloud data analysis method](#).

Channel No.	Angular position	
	Horiz. offset (°)	Vertical (°)
1	3.33	-10.13
2	-2.24	-8.70
3	3.28	-7.33
4	-2.24	-5.93
5	3.25	-4.60
6	-2.25	-3.24
7	3.23	-1.93
8	-2.26	-0.59
9	3.23	0.70
10	-2.29	2.02
11	3.24	3.30
12	-2.33	4.63

Channel No.	Angular position	
	Horiz. offset (°)	Vertical (°)
13	3.26	5.92
14	-2.37	7.26
15	3.29	8.58
16	-2.42	9.94
17	3.33	12.35
18	-2.46	13.72
19	3.35	15.04
20	-2.48	16.39
21	3.37	17.69
22	-2.49	19.03
23	3.39	20.32
24	-2.52	21.64
25	3.43	22.94
26	-2.55	24.27
27	3.49	25.58
28	-2.60	26.94
29	3.57	28.28
30	-2.67	29.68
31	3.67	31.05
32	-2.75	32.48

Appendix B: Absolute time of point cloud data

B.1 Source of absolute time

The lidar retrieves the current absolute time by connecting to an external clock source.

B.1.1 GNSS as the clock source

The lidar connects to a third-party GNSS module to obtain pulse-per-second (PPS) signals and NMEA sentences.

- NMEA signal: Can receive \$GPRMC or \$GNRMC sentences.
- The timing requirements of PPS and NMEA are shown in [Section 2.2.1 Pin description](#).

The absolute time is updated as follows:

NMEA status	Date and time (accurate to the second)	Lidar behavior
Unlocked (Initial)	Virtual	Because the lidar has not been locked before, it starts counting from a virtual UTC (such as 2000-01-01 00:00:00) using the lidar's internal 1 Hz signal.
Locked	Synchronized	At each rising edge of the internal 1 Hz signal, the lidar obtains the actual date and time by performing these two steps: 1. Extract the date and time from the previous NMEA message. 2. Add 1 full second.
Unlocked (Lost)	Drifting	When the lidar goes from Locked to Unlocked, it starts counting from the last synchronized time using the lidar's internal 1 Hz signal. This absolute time will gradually drift from the actual GNSS time.

PPS status	μ s time	Lidar behavior
Unlocked (Initial)	Not synchronized	The lidar's internal 1 Hz signal is not aligned with the GNSS second.
Locked	Synchronized	The rising edge of the lidar's internal 1 Hz signal is aligned with the rising edge of the PPS signal (i.e. the start of each GNSS second).
Unlocked (Lost)	Drifting	The lidar counts the absolute time using the internal 1 Hz signal. This absolute time will gradually drift from the actual GNSS second.

B.2 Absolute time of the Point Cloud Data Packets

The absolute time of a Point Cloud Data Packet is $t_0 = t_s + t_{\text{frac}}$, where:

- t_s is the whole second part (see the **Date & Time** field).
- t_{frac} is the microsecond or nanosecond part (see the **UTC Fractional Seconds** field).

The definition of the above fields is in [Section 3.1.2 Header](#).

Appendix C: Legal notice

Copyright © 2017-2026 Hesai Technology Co., Ltd.

All rights reserved. Use or reproduction of this manual in parts or its entirety in any form or by any means without the written authorization of Hesai is prohibited.

Hesai Technology makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability, or fitness for any particular purpose. Further, Hesai Technology reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revisions or changes.

HESAI and HESAI logo are registered trademarks of Hesai Technology. All other trademarks, service marks, and company names in this manual or on Hesai's official website are properties of their respective owners.

The software included in this product contains copyright that is registered under Hesai Technology. Any third party is not permitted, except as expressly permitted by the licensor or expressly required by applicable law, to decompile, reverse engineer, disassemble, modify, rent, lease, loan, distribute, sublicense, create derivative works based on the whole or any part of the software.

Hesai Product Warranty Service Manual is on the Warranty Policy page of Hesai's official website: <https://www.hesaitech.com/warranty-policy/>

Hesai Technology Co., Ltd.

Phone: +86 400 805 1233

Website: www.hesaitech.com

Address: Building A, Haisu Culture Plaza, Shanghai, China

Business Email: info@hesaitech.comService

Email: service@hesaitech.com